












Profi-Boss Quick Guides – First Steps

30 Stamford Street, Altrincham, Cheshire. WA14 1EY.

Tel: ++44 (0)161-928 5940

1. Changing the Profi-Boss language to English.





Changing the language displayed on the Profi-Boss is very straightforward and essential when you get your new system if you cannot understand German.

1. Press  and  together to bring up the Profi-Boss Menu.
2. Scroll down twice using the down arrow key  until you reach the 'PROFI-BOSS' option.
3. Press  to select this option.
4. Scroll down five times using the down arrow key  until you reach the 'Deutsch' option.
5. Press  to select this option.
6. Press the up arrow  once and it should change to 'English'.
7. Press  to select this option.
8. Your controller is now in English, press the loco key  twice to get back to the main running screen.


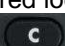 

2. Selecting a locomotive address.

There are two ways to select a locomotive address. Either you can select a preset one from the pre-installed databank known as the *list*, or you can enter the number directly.

Using the locomotive list

1. Press and hold the loco key  for approximately one second.
2. The library of stored locos will now be displayed. You can use the up arrow , down arrow , or the control knob to scroll through the items.
3. Press  to select the locomotive you wish to run.

Entering the locomotive address manually

1. Press and hold the loco key  for approximately one second.
2. The library of stored locos will now be displayed. Type in the loco address you would like using the keypad.
You can use the  button to cancel the numbers you have typed if you have made a mistake.
3. Press  to select the address you have typed in.