










# Profi-Boss Quick Guides – Programming

30 Stamford Street, Altrincham, Cheshire. WA14 1EY.

Tel: ++44 (0)161-928 5940

## 1. Changing a locomotive address.

Whether you have just bought a new locomotive that has the same address as one of your current locomotives, or you just fancy a change learning to change the locomotive address is essential.

1. Ensure that only the locomotive you want to program is on the track. Alternatively you can attach the Profi-Boss to a separate piece of track to do your programming on; referred to as a programming track.
2. Press  and  together to bring up the Profi-Boss Menu.
3. Press the up arrow  once and the display should have 'Loco Programming' selected.
4. Press  to select this option.
5. The display should show 'Loco Number'.
6. Press  to select this option.
7. Three question marks will be displayed, this indicates that the locomotive address is being read (this takes a few moments). If the decoder was read successfully the loco number will be displayed after a short period of time, if it was not successful 'error' will be displayed.
8. Now you can use either the keypad to enter the address number you wish to change the locomotive to manually, or you can turn the control knob to cycle through the numbers.
9. Once you have entered your desired address press  to program the locomotive.
10. Your locomotive address has now been changed, press the loco key  three times to get back to the main running screen.
11. You should now be able to run your locomotive on the newly programmed address.